

PP-8902 Jumper Setting

※ SOFTWARE SWITCH 1:

There is no hardware Dip Switch for PP8902 Series.

SWITCH 1		FUNCTION
1	2	Baud Rate
OFF	OFF	115200
OFF	ON	19200
ON	OFF	9600
ON	ON	38400
3	Onboard Interface	
OFF	USB	
ON	COM	
4	Reserve	
OFF	Reserve	
ON	Reserve	
5	Reserve	
OFF	Reserve	
ON	Reserve	
6	USB Class	
OFF	Printer Class	
ON	VCOM	
7	printable width	
OFF	512dots	
ON	576dots	
8	Paper width	
OFF	80mm	
ON	58mm	

※ SOFTWARE SWITCH 2 :

SWITCH 2	FUNCTION
1	Paper Feed Back
OFF	Disable
ON	Enable
2	Cut Paper after Cover Return
OFF	Enable
ON	Disable
3	Raster Bitmap Printing
OFF	Batch Print
ON	Line Print
4	Before Cut Paper
OFF	Normal Cut
ON	Cut and without paper feed
5	Busy condition
OFF	Enable
ON	Disable
6	< CR > Auto Line Feed
OFF	Enable
ON	Disable
7	Parity Check
OFF	NONE
ON	EVEN
8	Handshaking
OFF	DTR/DSR
ON	XON/XOFF

※ SOFTWARE SWITCH 3 :

SWITCH 3			FUNCTION
1	2	Print Speed	
OFF	OFF	220mm/s	
ON	OFF	200mm/s	
OFF	ON	180mm/s	
ON	ON	250mm/s	
3			Thai Font mode
OFF			1 PASS
ON			3 PASS
4			UPOS Write
OFF			Disable
ON			Enable
5	6	7	Print Density
OFF	OFF	OFF	100%
ON	OFF	OFF	110%
OFF	ON	OFF	120%
ON	ON	OFF	130%
OFF	OFF	ON	90%
ON	OFF	ON	80%
8			Auto cutter
OFF			Enable
ON			Disable

※ SOFTWARE SWITCH 4 :

SWITCH 4		FUNCTION
1		Beep Sound after Cut paper
OFF		Disable
ON		Enable
2	3	Barcode Height Reduction
OFF	OFF	Disable
ON	OFF	Reduce 25%
OFF	ON	Reduce 50%
ON	ON	Reduce 75%
4	5	Line Space Reduction
OFF	OFF	Disable
ON	OFF	Reduce 25%
OFF	ON	Reduce 50%
ON	ON	Reduce 75%
6	7	Line Feed Reduction
OFF	OFF	Disable
ON	OFF	Reduce 25%
OFF	ON	Reduce 50%
ON	ON	Reduce 75%
8		Switch 1 Selection
OFF		Zero packet
ON		NAK packet

※ JP3&JP4 : Use for Firmware download.

JP3	JP4	Function
Short	Open	Normal Mode
Open	Short	Firmware download mode